

INSTALLATION INSTRUCTIONS

| | |
|---------------------|-----------|
| VEHICLE | HITCH NO. |
| TOYOTA-LAND CRUISER | 75025 |

EQUIPMENT REQUIRED:

WIRING ACCESS LOCATION: SUV 6


DRILL BITS: 1/2

HITCH REQUIRES 5/8" PIN AND CLIP IF STABILIZING PIN IS NOT INSTALLED.

WRENCHES: (TIGHTEN ALL FASTENERS WITH TORQUE WRENCH) 3/4, 7/8

DO NOT EXCEED LOWER OF TOWING VEHICLE MFR'S RATINGS OR

| HITCH TYPE ▼ | MAX GROSS TRLR WT(LB) | MAX TONGUE WT(LB) |
|----------------------------|-----------------------|-------------------|
| WEIGHT DISTRIBUTING | 6000 | 750 |
| WEIGHT CARRYING BALL MOUNT | 3500 | 350 |

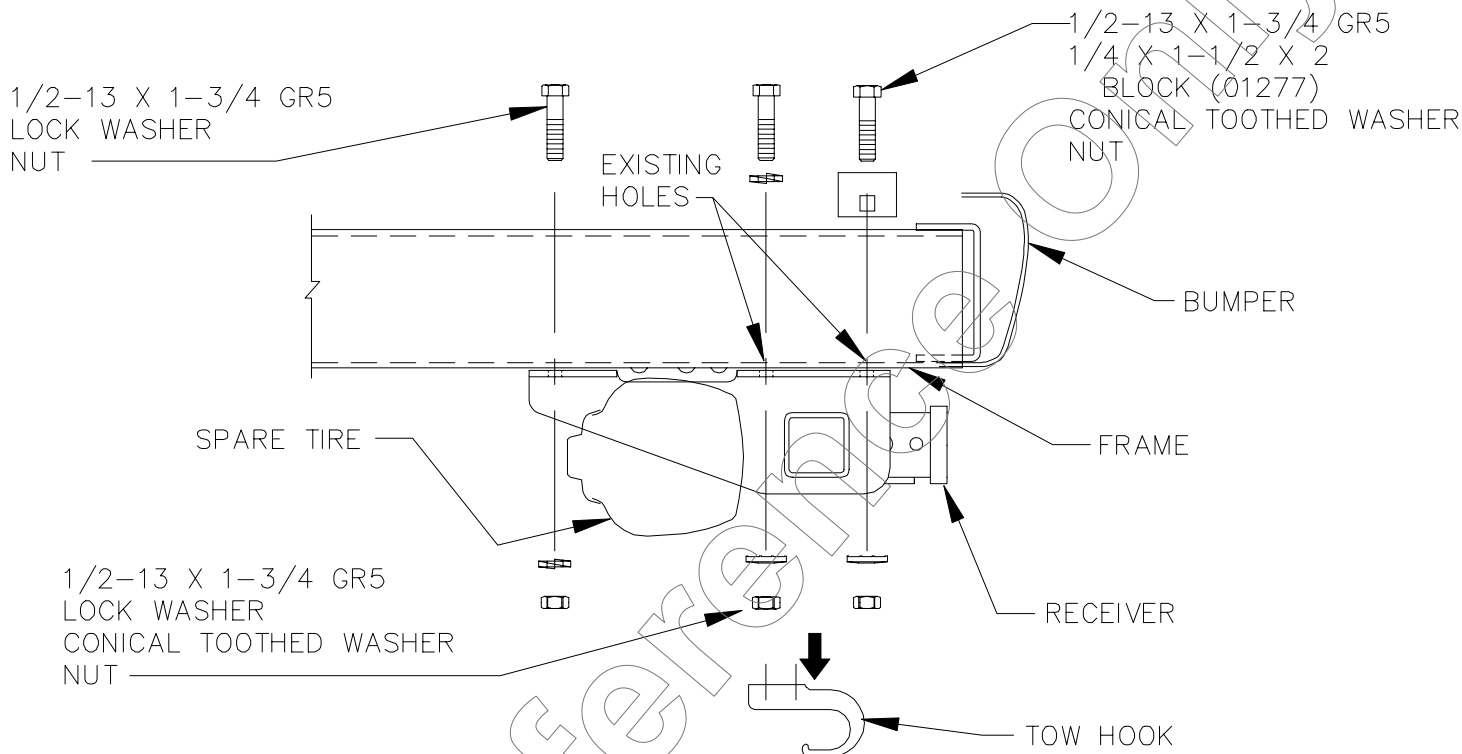


1. REMOVE TOW HOOK FROM END OF FRAME ON RIGHT SIDE. RETURN FASTENERS AND TOW HOOK TO VEHICLE OWNER.
2. INSTALL BOLTS, LOCK WASHERS AND BLOCKS THROUGH EXISTING HOLES IN FRAME AS SHOWN. POSITION HITCH AND INSTALL REMAINING FASTENERS PER ILLUSTRATION.
3. USING HITCH AS A TEMPLATE DRILL 1/2" HOLES THROUGH FRAME. INSTALL FASTENERS PER ILLUSTRATION.

TIGHTEN 1/2 GR5 FASTENERS TO 75 LB.-FT.

OPTIONAL LOCKING STABILIZING PIN

J-PIN

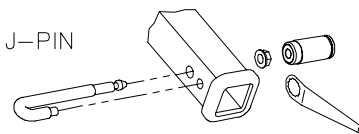

(Order Separately)

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR CONNECTING DEVICES AND TOWING SYSTEMS OF THE STATE OF NEW YORK AND V.E.S.C. REGULATION V-5.

| | |
|---------------------|------------------|
| APPROX WEIGHT (LB.) | FASTENER KIT NO. |
| 35.0 | 1130-581 |

NOTE: Check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Follow car maker's specs for maximum trailer weight and tongue weight. Do not cut access or attachment holes with a torch.

